

# HD-Screen

VC.3024-HDS | VC.3034 | VC.3039 | VC.3042

HD-Bildschirm | Ecran HD | Pantalla HD | Schermo HD | HD-Scherm



**EN**

- Attach the screen to the camera by inserting the Allen screws
- Adjust the screen simply by pushing it into the right position

**ES**

- Fije la pantalla a la cámara insertando los tornillos Allen
- Ajuste la pantalla simplemente moviéndola a la posición correcta

**DE**

- Befestigen Sie den Bildschirm an der Kamera, indem Sie die Inbusschrauben einsetzen
- Passen Sie den Bildschirm einfach an, indem Sie ihn in die richtige Position schieben

**IT**

- Fissare lo schermo alla fotocamera inserendo le viti a brugola
- Regola lo schermo semplicemente spingendolo nella giusta posizione

**FR**

- Fixez l'écran à la caméra en insérant les vis Allen
- Réglez l'écran simplement en le poussant dans la bonne position

**NL**

- Bevestig het scherm aan de camera door de inbusschroeven aan te brengen
- Positioneer het scherm eenvoudig door het in de goede positie te duwen



**EN** Mouse and power supply are included in the camera package content

**DE** Maus und Netzteil sind im Inhalt des Kamerapakets enthalten

**FR** La souris et l'alimentation sont incluses dans le contenu du boîtier de la caméra

**ES** El ratón y la fuente de alimentación están incluidos en el embalaje de la cámara

**IT** Mouse e alimentatore sono inclusi nel contenuto del pacco della fotocamera

**NL** Muis en voeding worden met de camera meegeleverd

## EN PACKAGE CONTENT

1. One HDS monitor
2. Y power splitter cable
3. HDMI cable

## DE INHALT

1. Ein HDS-Monitor
2. Y Leistungsteilerkabel
3. HDMI-kabel

## FR CONTENU DE L'EMBLAGE

1. Un moniteur HDS
2. Câble de répartition d'alimentation en Y
3. Câble HDMI

## ES CONTENIDO DEL EMBALAJE

1. Un monitor HDS
2. Cable de alimentación en forma de Y
3. Cable HDMI

## IT CONTENT

1. Un monitor HDS
2. Cavo splitter Y di alimentazione
3. Cavo HDMI

## NL INHOUD VERPAKKING

1. Een HDS-monitor
2. Y-vormige voedingskabel
3. HDMI-kabel



Euromex Microscopen bv • Papenkamp 20 • 6836 BD Arnhem • The Netherlands  
T +31 (0) 26 323 22 11 • info@euromex.com • www.euromex.com

